
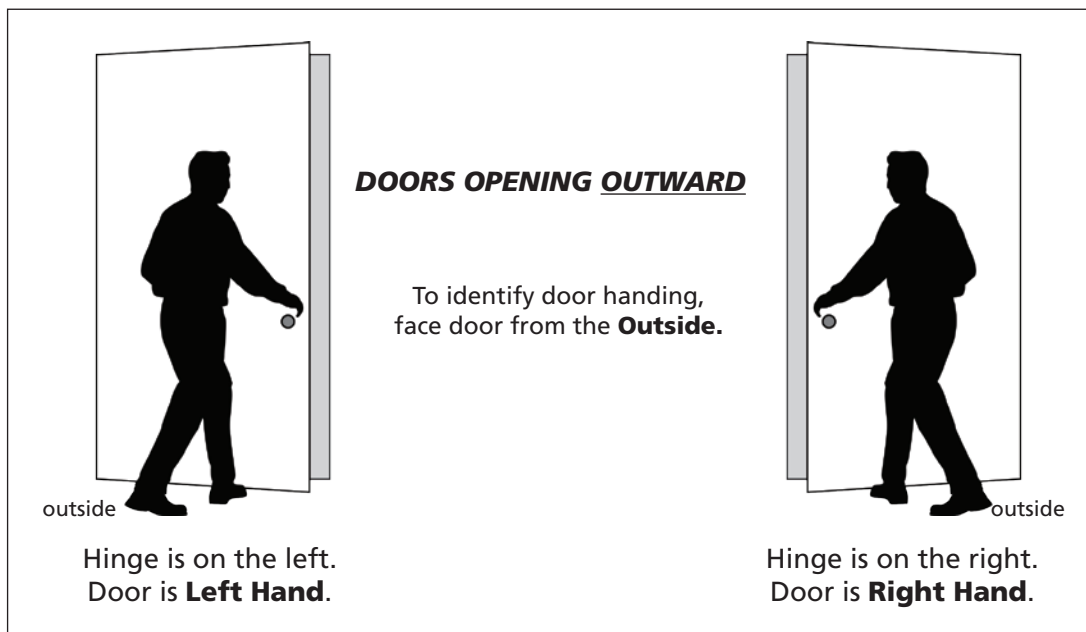


**Door Handing:** Handing of doors is **CRITICAL** when selecting Handlesets with Levers, Rosettes with Levers, Single Dummy with a Lever, Split Finish or Split Design combinations. Handing of doors is **NOT REQUIRED** for Standard Passage, Privacy, or Dummy functions.

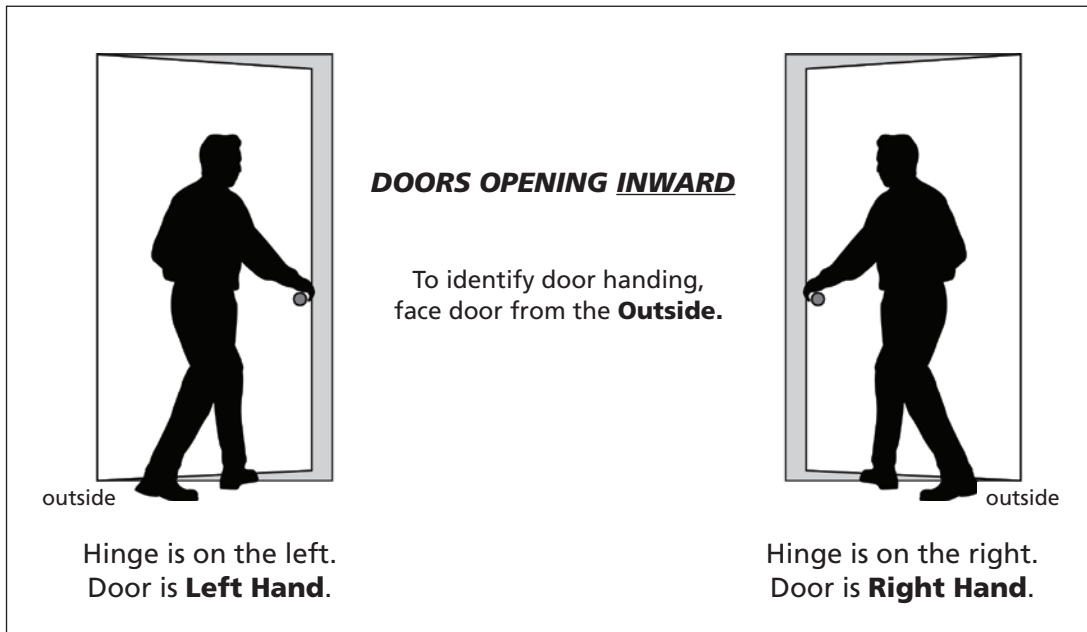

**Inside of Door** - The **Inside** of a door refers to the side of the door that faces the room. For example, for a bedroom door on a hallway, the **Inside** of the door would face the bedroom.

**Outside of Door** - The **Outside** of a door refers to the side of the door that faces away from the room. The **Outside** of a door is generally more visible to visitors, and therefore a rosette on this side of the door has no visible screws. For example, on a bedroom door, the **Outside** would face the hallway.